

# Blowoff Valve 50mm

Spring Pressure Chart

For more information visit:

© Nuke Performance AB 2011

[www.nukeperformance.com](http://www.nukeperformance.com)

## Engine Vacuum Reading / Color

Between :

<b>1</b>	0,50 - 0,75 bar	7,25 - 10,9 psi	BLACK
<b>2</b>	0,35 - 0,50 bar	5,07 - 7,25 psi	BLUE
<b>3</b>	0,00 - 0,35 bar	0,00 - 5,07 psi	WHITE

**\*\* Measure engine vacuum at idle.**  
(engine at operating temperature)



This product is designed, developed and manufactured by Nuke Performance AB in Sweden.

Use Lubricant before tightening fittings and always use extra care when handling any kind of fuel.

All our products are installed at your own risk and could damage your equipment, engine or vehicle, unless they are properly installed.

## Information:

Design combined with top quality performance.

For more information about the products and retailers visit

[www.nukeperformance.com](http://www.nukeperformance.com)

**nuke**  
PERFORMANCE